


# PARTS LIST FOR DR118KL-A1

DR118KL-A1

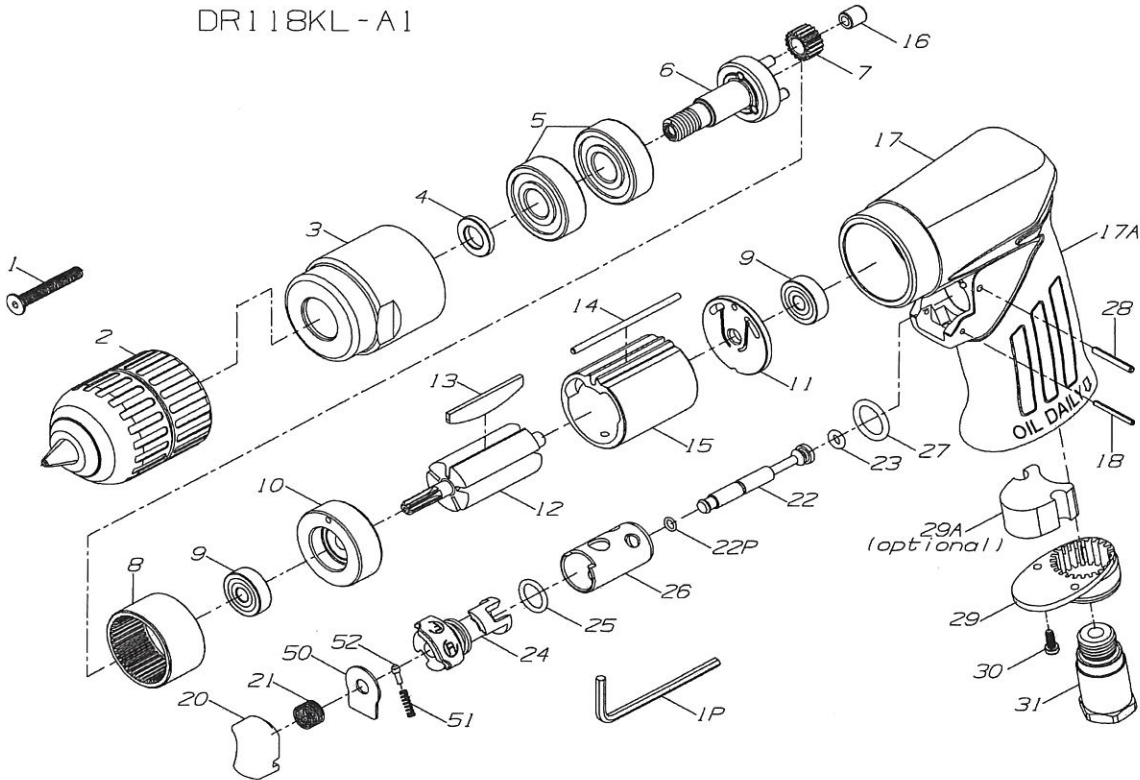

ITEM NO.	PART NO.	DESCRIPTION
1	351-0614	Screw
1P	351-0615	Allen Wrench
2	351-1134	3/8" Keyless Chuck
3	351-0618	Gear Housing
4	351-0619	Washer
5	351-0620	Ball Bearing
6	351-0621	Planet Carrier
7A	351-0622	Planet Gear(inc.#16)
8	351-0623	Internal Gear
9	351-0624	Ball Bearing
10	351-0625	Bearing Case
11	351-0626	Rear End Plate
12	351-0627	Rotor
13	351-0628	Rotor Blade
14	351-0629	Motor Pin
15	351-0630	Cylinder
16	351-0631	Bushing
17	351-0632	Motor Housing
17A	1230N-0234701-2	Housing Sleeve
20	351-1135	Trigger
21	351-0637	Valve Spring
22	351-0638	Valve
22P	351-0639	O-Ring
23	351-0640	O-Ring
24	351-0641	Reverse Valve
25	351-0642	O-Ring

ITEM NO.	PART NO.	DESCRIPTION
26	351-0643	Reverse Valve Bushing
27	351-0644	O-Ring
28	351-0645	Pin
29	351-0646	Exhaust Deflector
29A	351-1093	Muffler (Option)
30	351-0647	Screw
31	351-0648	Inlet Bushing
50	351-0988	Trigger Plate
51	351-0989	Spring
52	351-0990	Valve Cap